


Nur für die 56 cm breite Ausführung  
 For 56 cm wide version only  
 Seulement pour la version de 56 cm  
 Uitsluitend voor de brede uitvoering  
 56 cm  
 Sólo para versión de 56 cm  
 Apenas para a versão com 56 cm de  
 largura  
 Solamente per versione larga 56 cm  
 Μόνο για μοντέλο πλάτους 56 cm

FIG. 1

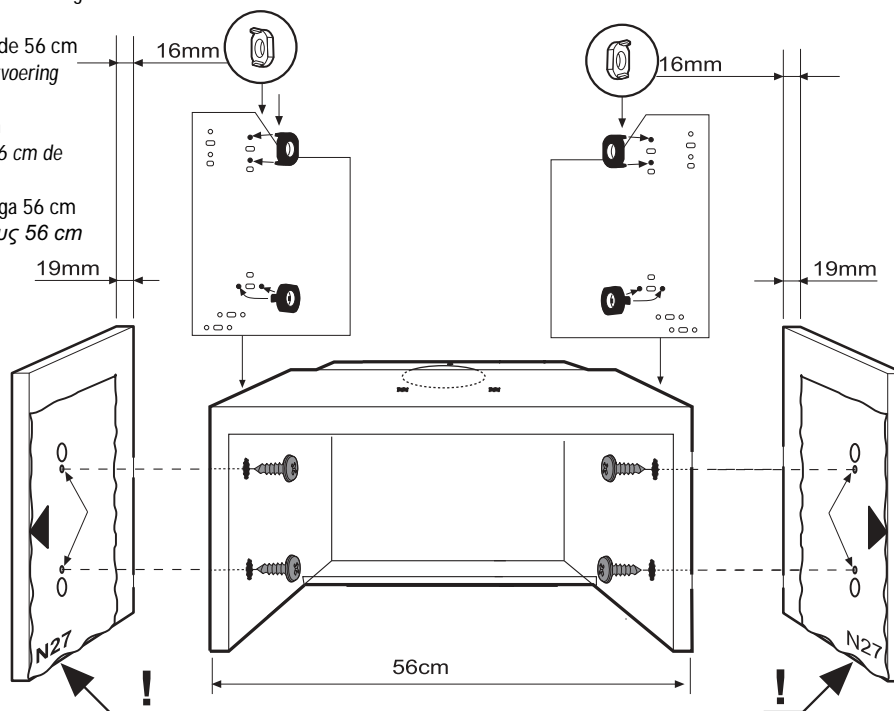

5019 618 33037



## **(GB) INSTALLATION AND USE**

The minimum distance between the support surface of the recipients on the cooking device and the lowest part of the hood must not be less than 65 cm in case of electric cookers and 75 cm for gas or combination cookers. **If the installation instructions for the gas cooker specify a greater distance, this must be taken into account. Contact a qualified technician for installation.**

### **Figure 1**

Pull out the steam deflector (1);  
Open the grille or grease filters by operating the special devices (2-3).

Fitting the decorative panel (not supplied with the product) on the steam deflector:  
release the steam deflector: bend the tabs (one each side) inside the hood until the door is released (4).  
Remove the steam deflector (5).  
Drill following the special diagram (7).  
Fix with 8 screws (8).

Installation of 56 cm version hood: place the spacers on the side walls of the hood, as shown in **Fig.1**.

### **Figure 2**

Before installing the hood, establish the outlet hole to be used (top or rear): open the hole by pressing on the precut part.

### **Figure 2a**

Fix the assembly diagram on the left inner side of the wall unit (9).  
Drill following the diagram (10).  
Fix the assembly diagram on the right inner side of the wall unit (11).  
Drill following the special diagram (12).  
Fix the diagram on the wall (13).  
Drill and insert the 2 plugs (14), fix the hooks (15) and hook the hood (16).  
Apply the brackets and adjust the distance from the wall as required (17).  
Fix to the wall units with the screws supplied (18).  
Position the spacer according to the depth of the wall unit and tighten the 2 screws (19-20).  
Fit the flange and exhaust pipe **21A** (not supplied - extractor version) or the deflector (**21F** - filtering version).  
Refit the steam deflector (22), hooking it by operating the special side tabs (23).  
Insert the grille or metal filters (24), operating the special devices (25).

**Extractor Version:** steam and fumes are exhausted to the outside through a discharge pipe fixed to the collar located on the top of the hood.

**Important!** If the hood is equipped with a carbon filter, this must be removed.

The discharge air must not be ducted to a flue used for removing fumes produced by appliances using gas or other fuels, but must have a separate outlet. All the national regulations on air discharge must be observed.

**Filtering Version:** The air is filtered by a carbon filter and recycled in the surrounding environment.

**Caution!** If the hood is not equipped with a carbon filter, one must be ordered and fitted before use.

## PRODUCT SHEET

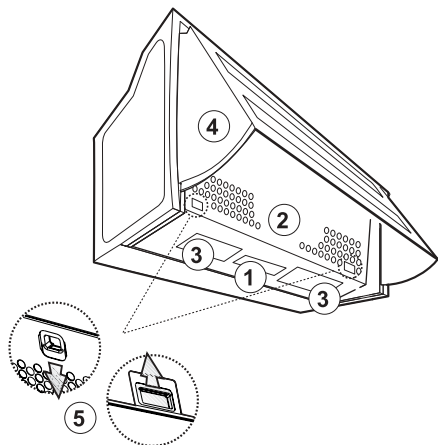


FIG. 3

1. Control panel.
2. Grease filters or grille.
3. Lighting unit/s.
4. Pull-out steam deflector.
5. Filter or grille release devices.

### Removing and replacing or washing the grease filter:

1. Unplug the appliance or disconnect the power supply.
2. Pull out the steam deflector (1 - Fig. 1).
3. Open the grille or grease filters (2,3 - Fig. 1).
4. For hood version with grille: Remove the device securing the grease filter (Fig. 5).
5. Remove the dirty grease filter.
6. After replacing or cleaning the grease filter (depending on model) carry out in reverse order to refit, making sure it covers the entire extraction surface.

### Fitting or replacing the carbon filter:

1. Unplug the appliance or disconnect the power supply.
2. Pull out the steam deflector (1 - Fig. 1).
3. Open the grille or grease filters (2,3 - Fig. 1).
4. If the filters are not fitted:  
Fit the carbon filter over the motor-rotor protection grille and turn clockwise until locked (Fig. 6).
5. If the carbon filter is already fitted and needs replacing, turn the carbon filter anticlockwise.
6. Refit the extractor grille or grease filters.

### Replacing bulbs:

1. Unplug the appliance or disconnect the power supply.
2. Pull out the steam deflector (1 - Fig. 1).
3. Open the grille or grease filters (2,3 - Fig. 1).
4. Remove the burnt-out bulb.
5. Use 40 W max. (E14) bulbs only.
6. Refit the extractor grille.

### CONTROL PANEL

- A. Light switch.
  - B. Speed selector switch.
- With light and speed selected, the hood switches on when the steam deflector is opened, and switches off when it is closed.

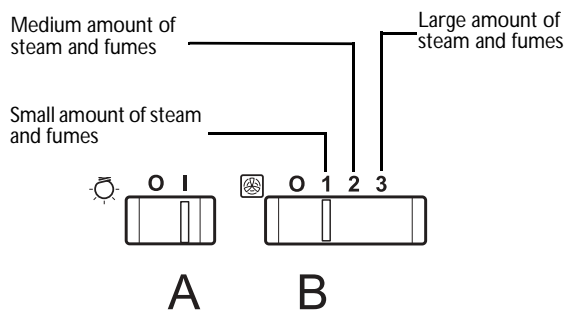


FIG. 4

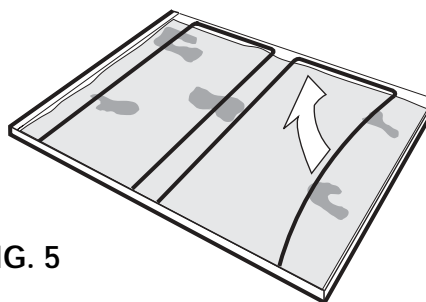


FIG. 5

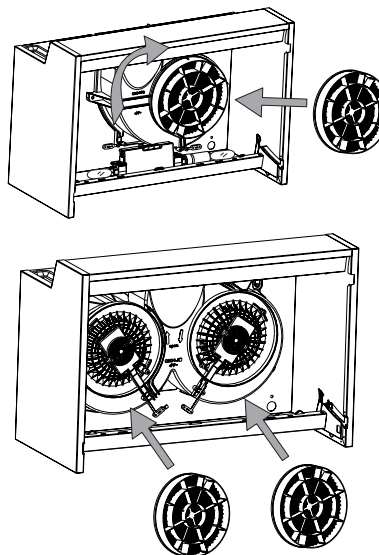



FIG. 6


## SAFEGUARDING THE ENVIRONMENT

### 1. Packing

Packing materials are 100% recyclable and are marked with the recycling symbol . Comply with the local regulations for their disposal. Packing materials (plastic bags, polystyrene, etc.) are a potential source of danger, therefore keep them out of the reach of children.

### 2. Appliance

This appliance is marked in compliance with European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is correctly scrapped, the user can help prevent potentially negative consequences for the environment and the health of persons.

The symbol  on the product or the accompanying documentation indicates that this product should not be treated as domestic waste but must be taken to a suitable collection centre for the recycling of electrical and electronic equipment.

Disposal must be carried out in compliance with local regulations on waste disposal.

For further information on the treatment, recovery and recycling of this product, contact the competent local authority, the domestic waste collection service or the shop where the product was purchased.



## PRECAUTIONS AND GENERAL RECOMMENDATIONS

### CAUTION!

- **Children or infirm persons must not operate the appliance without supervision.**
  - **Make sure children do not play with the appliance.**
1. Do not connect the appliance to the power supply until installation is completed; disconnect the hood from the mains before performing any cleaning or maintenance.
  2. Do not cook food "flambé" under the hood. Naked flames could cause a fire.
  3. Do not leave pans unattended when frying, as the cooking oil could catch fire.
  4. Regular cleaning and maintenance guarantees good hood operation and performance. Regularly remove all grime deposits. Regularly clean or replace the filter. Do not use flammable materials for the ducting of exhausted air.
  5. If the hood is used together with other non-electric appliances, the negative pressure in the room must not exceed 4Pa ( $4 \times 10^{-5}$  bars). Make sure the room is adequately ventilated.

### Electrical connections

Before connecting the hood to the power supply, make sure the voltage specified on the dataplate matches that in your home. The dataplate is located inside the hood behind the grease filter.

If the appliance is fitted with a power cable and plug, the plug must be placed in an accessible position.

If the hood is not provided with a plug, use one that complies with current standards or use a double-pole switch, complying with current regulations, with a minimum contact opening gap of 3 mm. Replacement of the power cable with plug or flexible cable can only be carried out by the "Assistance Service" or by qualified personnel.

## Cleaning the hood

**Warning!** Failure to remove oil/grease (at least once a month) could cause a fire.

Use a soft cloth with a neutral detergent. Never use abrasive substances or alcohol.

### Before using the hood

Please read these instructions carefully and keep them for future reference, in order to ensure best use of your hood.

Packing materials (plastic bags, polystyrene, etc.) are a potential source of danger, therefore keep them out of the reach of children. Make sure the hood has not been damaged during transport.

Installation, electrical connections and replacement of the power cable with plug or flexible cable must be carried out by a qualified technician in compliance with the current local regulations.

### Declaration of conformity

This product has been designed, manufactured and put on the market in conformity with the following:

- safety objectives of "Low Voltage" Directive 73/23/EEC
- protection requirements of "EMC" Directive 89/336/EEC amended by Directive 93/68/EEC.

### Troubleshooting guide

The hood does not work:

- Is the plug properly inserted in the power socket?
- Is there a power failure?
- Is the fuse blown?

The hood is not extracting efficiently:

- Is the right speed selected?
- Do the filters need cleaning or replacing?
- Are the air outlets blocked?

The light does not work:

- Does the bulb need replacing?
- Is the bulb correctly fitted?
- Is the fuse blown?

### AFTER-SALES SERVICE

Before calling the Assistance Service

1. Check if you can fix the problem yourself (see "Troubleshooting guide").
2. Switch the hood off and then on again to check if the problem has gone.
3. If the problem persists, call the Assistance Service.

**Specify:**

- the type of fault,
- the product model given on the dataplate located inside the hood and visible on removing the grease filters.
- your full address,
- your telephone number and area code.
- the Service code (the number appearing below the word SERVICE on the dataplate inside the hood behind the grease filter).

Should any repairs be necessary, contact an authorised Technical Assistance Centre (to ensure original spare parts are used and that repairs are carried out correctly).

Failure to comply with these instructions can compromise the safety and quality of the product.

**SERVICE**

